QUICK START GUIDE

REV I #1.15

ALTIMETERS

Manual for Download and Support
WWW.LBALTIMETERS.COM

ARES II - QUICK START & ROAD MAP

Quick Buttons
Press and hold button for 5 seconds

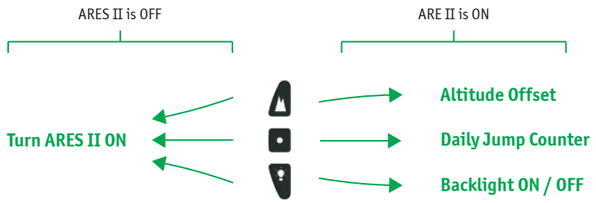

Performing ACCESS to Logbook and Jump Info

Press and release

Press

-------- hold button down-------

Release

Logbook and Jump Info window

Performing ACCESS to Settings

Perform ACCESS to Logbook and Jump Info

Press

--- hold for 5 seconds---

Release

Settings Window
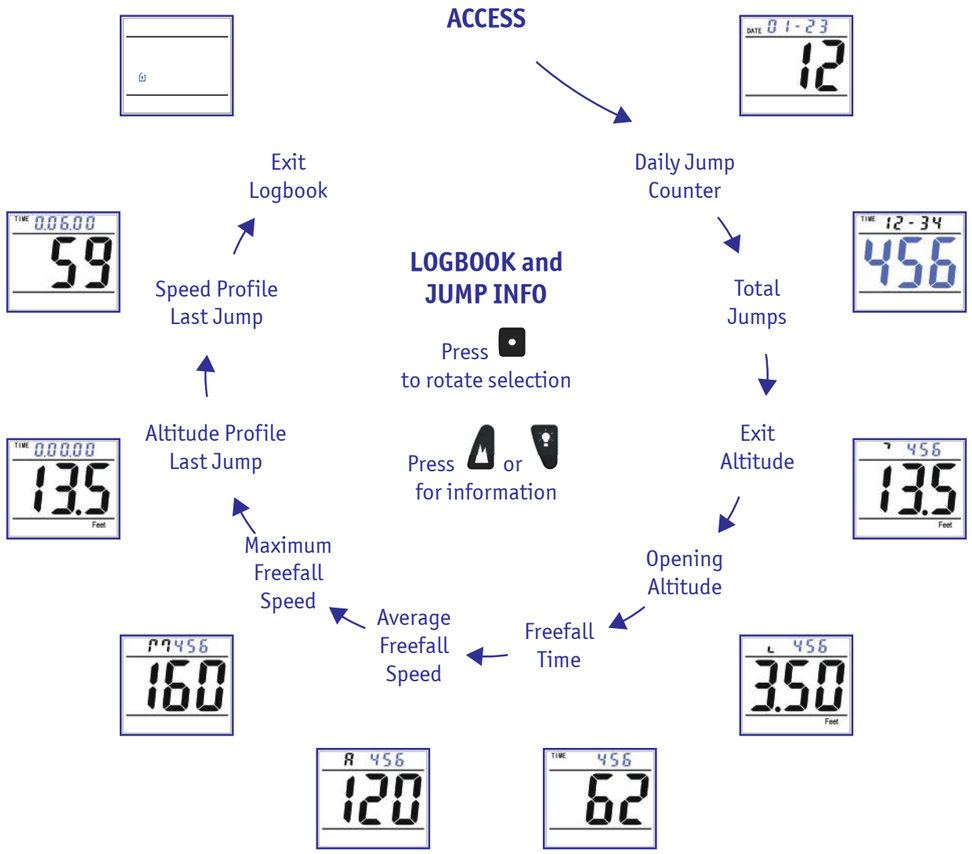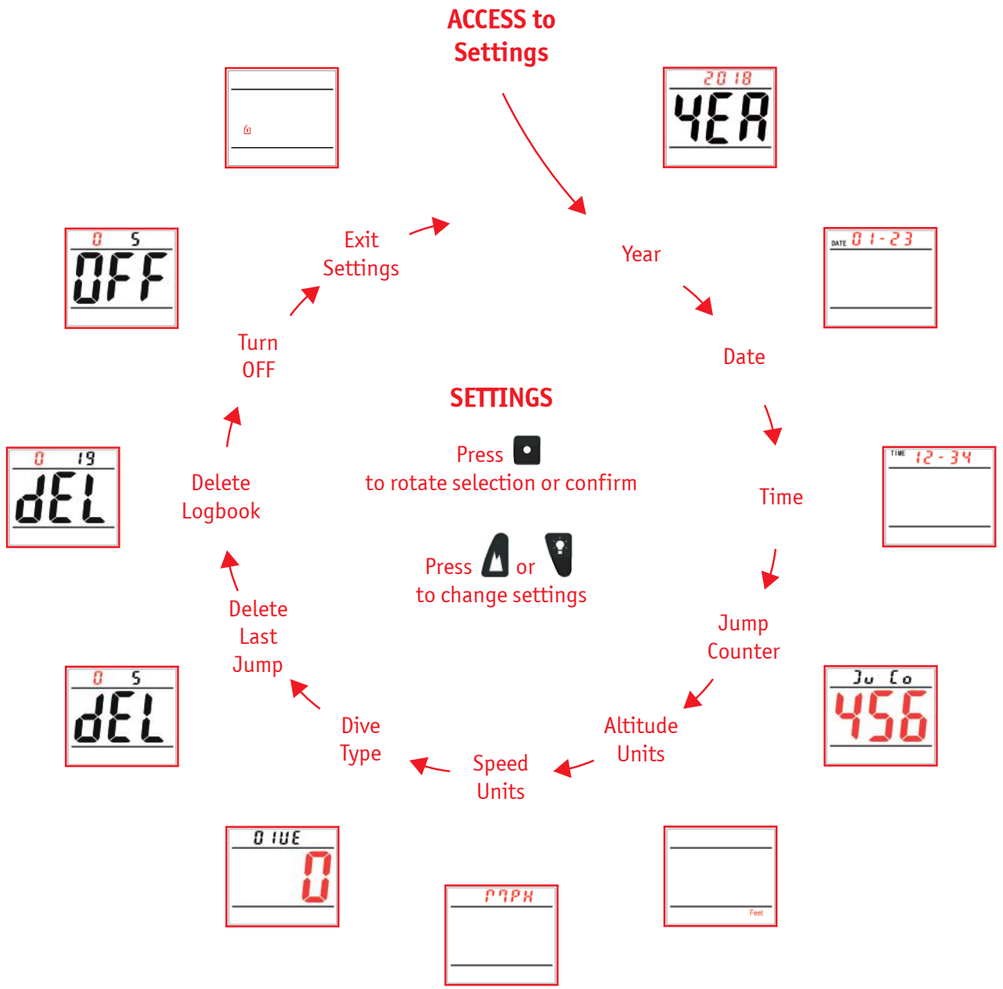
ARES II - Quick Start & Road Map